

# A5 paper - double sided print

thumbsUp!

Thumb Cam - Mini Spy Camera

Includes:

Thumb Cam mini-spy camera

USB cable

User Manual

Features:

Dimensions: 73mm x 20mm x 11mm

Weight: 18g

Sound and video recording in AVI video format

Built in rechargeable lithium battery

Requires micro SD card (not included)

Overview:

1. Start/Stop Button

2. Power Light

3. Standby Light

4. Video/Photo Mode Indicator Light

5. Power Switch

6. Memory Card Slot

7. USB Port

8. Camera

9. Microphone

10. Mode Selector Switch

Installing Memory Card

The camera does not include internal memory so before using insert a Micro SD card (up to 8GB) into the memory card slot (6).

Connection to PC for Charging and Viewing Files

Connect the Thumb Cam to a PC via the port (7) using the USB cable provided and turn on the unit. The Thumb Cam will appear on the PC as a removal disk; video files stored on the Thumb Cam can be viewed or transferred to the PC.

To charge: connect the Thumb Cam to a PC via the port (7) using the USB cable provided and turn on the unit. The power light (2) will flash until the unit is fully charged. The battery will take approximately an hour to fully charge at which point the Thumb Cam should be disconnected from the PC to prevent the possibility of damage caused by overcharging.

For the first five times that the unit is charged ensure that the battery is completely drained first; this is to ensure the unit operates at its optimum level. Although it is not subsequently crucial to wait until the battery is fully drained before recharging the unit, it is recommended that you continue to do so. The battery should be fully recharged every month.

Taking Photographs

A) Turn on the Thumb Cam (5). Set the mode selector switch (10) to photo.

B) Press the start/stop button (1). The green power light (2) will illuminate, indicating the Thumb Cam is in standby mode. After a moment the red video/photo mode indicator light (4) will illuminate for a second. The Thumb Cam is now ready to take a picture.

C) To take a picture press the start/stop button (1). The red video/photo mode indicator light (4) will illuminate and then flash on and off for a second to indicate the picture is being saved. The Thumb Cam is now ready to take another picture.

7

6

1

8

2

3

9

5

4

10

Recording Video

A) Turn on the Thumb Cam (5). Set the mode selector switch (10) to video.

B) Press the start/stop button (1). The green power light (2) will illuminate, indicating the Thumb Cam is in standby mode. After a moment the red video/photo mode indicator light (4) will illuminate for a second. The Thumb Cam is now ready to record.

C) To record video press the start/stop button (1). The red video/photo mode indicator light will flash to indicate the Thumb Cam is recording.

D) To stop recording press the start/stop button. To resume recording press the stop/start button again.

Setting the Time Stamp

A) Connect the Thumb Cam to a PC using the USB cable.

B) Create a new TXT file called 'TAG' using a text editing program such as Notepad.

C) Write the date and time in the file following the format below:

[date]

2010/02/23

09.45

The word 'date' must be in square brackets. Each part should be on a separate line, with a line space between them. The date must be written Year/Month/Day and the time Hour/Minute/Second.

D) Disconnect the Thumb Cam from the PC.

E) The time and date will now be saved on the Thumb Cam, while the TAG file will be deleted.

Note: The time and date will have to be reset every time the Thumb Cam has been turned off.

Technical Specifications:

Video: AVI Format 720 x 480

Supported Storage Format: Micro SD (up to 8GB)

File size: Approximately 50MB per minute of recorded video

Recording Time: Approximately 3 hours on an 8GB card

Approximately 2-3 hours continuous recording after one hour's charge

Please retain all information for future reference.

Imported & distributed by

Thumbs Up (UK) Ltd

Ruislip, Middlesex

HA4 0EJ, UK

Tel: 0845 466 8880

Fax: 0845 466 8881

info@thumbsupuk.com

www.thumbsupworld.co.uk

Thumbs Up GmbH

Nikolaus-Otto-Str. 1b, D-53859

Niederkassel, DE

Font: +49 228 555 236-0

Fax: +49 228 555 236-999

info@thumbsup.de

www.thumbsup.de

Thumbs Up France

164 av Joseph Kessel, 78950 Voisin

le Bretonneux, FR

Tel: +33 (0)1 61 37 02 90

Fax: +33 (0)1 61 37 03 05

info@thumbsup.fr

www.thumbsup.fr

CE

RoHS